



Originalfernbedienung    Ersatzfernbedienung

|   |              |   |                        |
|---|--------------|---|------------------------|
|    | Mute         |    | Mute / Dimmer          |
|    | Power        |    | Power                  |
|    | 1            |    | 1                      |
|    | 2            |    | 2                      |
|    | 3            |    | 3                      |
|    | 4            |    | 4                      |
|    | 5            |    | 5                      |
|    | 6            |    | 6                      |
|    | 7            |    | 7                      |
|    | 8            |    | 8                      |
|   | 9            |   | 9                      |
|  | ✓            |  | Guide / EPG / -/--     |
|  | 0            |  | 0                      |
|  | Red / <<<    |  | Red / Netflix / Search |
|  | Red / <<<    |  | <<< / Tune-            |
|  | Green / Stop |  | Green / APP / Repeat   |
|  | Green / Stop |  | Stop / Hold            |

Originalfernbedienung    Ersatzfernbedienung

|   |               |   |                             |
|---|---------------|---|-----------------------------|
|    | Yellow / Play |    | Play / Slow                 |
|    | Yellow / Play |    | Yellow / YouTube / Repeat   |
|    | Blue / >>>    |    | >>> / Tune+                 |
|    | Blue / >>>    |    | Blue / Prime Video / Random |
|    | Up            |    | Up                          |
|    | Left          |    | Left                        |
|    | OK            |    | OK                          |
|    | Right         |    | Right                       |
|    | Down          |    | Down                        |
|    | SFI           |    | D.Menu / Top                |
|   | Exit / Recall |   | Back / Return               |
|  | Exit / Recall |  | Exit / Cancel / Clear       |
|  | Info          |  | Info / Angle                |
|  | Prog +        |  | CH+ / Page+                 |
|  | TV / Radio    |  | TV/Radio /                  |
|  | Vol +         |  | Vol+                        |
|  | Prog -        |  | CH- / Page-                 |









Originalfernbedienung    Ersatzfernbedienung

|   |              |   |                            |
|---|--------------|---|----------------------------|
|    | Mute         |    | Mute / Dimmer              |
|    | Power        |    | Power                      |
|    | 1            |    | 1                          |
|    | 2            |    | 2                          |
|    | 3            |    | 3                          |
|    | 4            |    | 4                          |
|    | 5            |    | 5                          |
|    | 6            |    | 6                          |
|    | 7            |    | 7                          |
|    | 8            |    | 8                          |
|    | 9            |    | 9                          |
|  | ✓            |  | Guide / EPG / -/--         |
|  | 0            |  | 0                          |
|  | A/B          |  | Shift + Yellow / YouTube / |
|  | Red / <<<    |  | <<< / Tune-                |
|  | Red / <<<    |  | Red / Netflix / Search     |
|  | Green / Stop |  | Green / APP / Repeat       |

Originalfernbedienung    Ersatzfernbedienung

|   |               |   |                             |
|---|---------------|---|-----------------------------|
|    | Green / Stop  |    | Stop / Hold                 |
|    | Yellow / Play |    | Play / Slow                 |
|    | Yellow / Play |    | Yellow / YouTube / Repeat   |
|    | Blue / >>>    |    | >>> / Tune+                 |
|    | Blue / >>>    |    | Blue / Prime Video / Random |
|    | Up            |    | Up                          |
|    | Left          |    | Left                        |
|    | OK            |    | OK                          |
|    | Right         |    | Right                       |
|    | Down          |    | Down                        |
|    | SFI           |    | D.Menu / Top                |
|  | Exit / Recall |  | Exit / Cancel / Clear       |
|  | Exit / Recall |  | Back / Return               |
|  | Info          |  | Info / Angle                |
|  | Prog +        |  | CH+ / Page+                 |
|  | TV / Radio    |  | TV/Radio /                  |
|  | Vol +         |  | Vol+                        |


 



 








Originalfernbedienung    Ersatzfernbedienung

|   |              |  |                            |
|---|--------------|--|----------------------------|
|    | Mute         |     | Mute / Dimmer              |
|    | Power        |     | Power                      |
|    | 1            |     | 1                          |
|    | 2            |     | 2                          |
|    | 3            |     | 3                          |
|    | 4            |     | 4                          |
|    | 5            |     | 5                          |
|    | 6            |     | 6                          |
|    | 7            |     | 7                          |
|    | 8            |     | 8                          |
|    | 9            |     | 9                          |
|  | ✓            |   | Guide / EPG / -/--         |
|  | 0            |   | 0                          |
|  | A/B          |  | Shift + Yellow / YouTube / |
|  | Red / <<     |   | Red / Netflix / Search     |
|  | Red / <<     |   | << / Tune-                 |
|  | Green / Stop |   | Stop / Hold                |

Originalfernbedienung    Ersatzfernbedienung

|   |               |   |                             |
|---|---------------|---|-----------------------------|
|    | Green / Stop  |    | Green / APP / Repeat        |
|    | Yellow / Play |    | Play / Slow                 |
|    | Yellow / Play |    | Yellow / YouTube / Repeat   |
|    | Blue / >>     |    | >> / Tune+                  |
|    | Blue / >>     |    | Blue / Prime Video / Random |
|    | Up            |    | Up                          |
|    | Left          |    | Left                        |
|    | OK            |    | OK                          |
|    | Right         |    | Right                       |
|    | Down          |    | Down                        |
|    | SFI           |    | D.Menu / Top                |
|  | Exit / Recall |  | Back / Return               |
|  | Exit / Recall |  | Exit / Cancel / Clear       |
|  | Info          |  | Info / Angle                |
|  | Prog +        |  | CH+ / Page+                 |
|  | TV / Radio    |  | TV/Radio /                  |
|  | Vol +         |  | Vol+                        |



