




Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	✓		Guide / EPG / -/--
	0		0
	Red / <<<		Red / Netflix / Search
	Red / <<<		<<< / Tune-
	Green / Stop		Green / APP / Repeat
	Green / Stop		Stop / Hold

 



 


 



 






 



Originalfernbedienung Ersatzfernbedienung

	Yellow / Play		Play / Slow
	Yellow / Play		Yellow / YouTube / Repeat
	Blue / >>>		>>> / Tune+
	Blue / >>>		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	SFI		D.Menu / Top
	Exit / Recall		Back / Return
	Exit / Recall		Exit / Cancel / Clear
	Info		Info / Angle
	Prog +		CH+ / Page+
	TV / Radio		TV/Radio /
	Vol +		Vol+
	Prog -		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Vol -		Vol-
	TV/SAT		Smart / List
	TXT		Text / Goto
	Stop		Pause / Step / Freeze
	EXT		Display / Media
	SAT1 + OK	 + 	Shift + 2
	SAT2 + OK	 + 	Shift + 3
	TV + OK	 + 	Shift + 1
	PIP		Picture / Format

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	✓		Guide / EPG / -/--
	0		0
	A/B		Shift + Yellow / YouTube /
	Red / <<<		<<< / Tune-
	Red / <<<		Red / Netflix / Search
	Green / Stop		Green / APP / Repeat



 



 



 







 
 
Originalfernbedienung Ersatzfernbedienung

	Green / Stop		Stop / Hold
	Yellow / Play		Play / Slow
	Yellow / Play		Yellow / YouTube / Repeat
	Blue / >>>		>>> / Tune+
	Blue / >>>		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	SFI		D.Menu / Top
	Exit / Recall		Exit / Cancel / Clear
	Exit / Recall		Back / Return
	Info		Info / Angle
	Prog +		CH+ / Page+
	TV / Radio		TV/Radio /
	Vol +		Vol+





Originalfernbedienung Ersatzfernbedienung




	Prog -		CH- / Page-
	Menu		Menu / Home
	Vol -		Vol-
	TV/SAT		Smart / List
	TXT		Text / Goto
	Stop		Pause / Step / Freeze
	EXT		Display / Media
	SAT1 + OK		Shift + 2
	SAT2 + OK		Shift + 3
	TV + OK		Shift + 1

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	✓		Guide / EPG / -/--
	0		0
	A/B		Shift + Yellow / YouTube /
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-
	Green / Stop		Stop / Hold














 



 





Originalfernbedienung Ersatzfernbedienung

	Green / Stop		Green / APP / Repeat
	Yellow / Play		Play / Slow
	Yellow / Play		Yellow / YouTube / Repeat
	Blue / >>		>> / Tune+
	Blue / >>		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	SFI		D.Menu / Top
	Exit / Recall		Back / Return
	Exit / Recall		Exit / Cancel / Clear
	Info		Info / Angle
	Prog +		CH+ / Page+
	TV / Radio		TV/Radio /
	Vol +		Vol+





Originalfernbedienung Ersatzfernbedienung

	Prog -		CH- / Page-
	Menu		Menu / Home
	Vol -		Vol-
	TV/SAT		Smart / List
	TXT		Text / Goto
	Stop		Pause / Step / Freeze
	EXT		Display / Media
	SAT1 + OK	 + 	Shift + 2
	SAT2 + OK	 + 	Shift + 3
	TV + OK	 + 	Shift + 1

Originalfernbedienung Ersatzfernbedienung

