




















































 








Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Menu PBC		Menu / Home
	Title		Sound / Title
	Open / Close		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
	10+		Guide / EPG / -/--
	Clear		Fav / Marker / PC
	Display		Display / Media

Originalfernbedienung    Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	Slow		Pause / Step / Freeze
	Program		TV/Radio /
	USB		Picture / Format
	Audio		Audio / Lang I/II
	Mute		Mute / Dimmer
	Repeat		Green / APP / Repeat
	Setup		Yellow / YouTube / Repeat
	Up		Up
	Zoom		Text / Goto
	Play / Pause		Play / Slow
	Left		Left
	Enter		OK
	Right		Right
	Stop		Stop / Hold
	SRC		Back / Return
	Down		Down





Originalfernbedienung   Ersatzfernbedienung

	<<		<< / Tune-
	>>		>> / Tune+
	Vol-		Vol-
	Vol+		Vol+
	I<<		I<< / Preset-
	>>I		>>I / Preset+

Originalfernbedienung   Ersatzfernbedienung