





































Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	TV/STB		AV / Input / RDS
	Mute		Mute / Dimmer
	F.List		Display / Media
	Repeat		Shift + Green / APP / APP /
	Res.		Shift + Picture / Format
	Picture		Picture / Format
	Book		Shift + Smart / List
	Next Page		Shift + Display / Media
	R.Skip		I<< / Preset-
	REW		<< / Tune-
	FWD		>> / Tune+
	F.Skip		>>I / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	CH/PG+		CH+ / Page+
	CH/PG-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol+		Vol+
	Vol-		Vol-
	Info		Info / Angle
	EPG		Guide / EPG / -/-
	Back		Back / Return
	FAV		Fav / Marker / PC
	SAT List		Smart / List
	Option		Setup / OPT /



