











 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	V+		Vol +
	V-		Vol -
	AV		AV
	P+		Ch +
	P-		Ch -
	Audio		Dual
	Menu		Menu
	Info		Info
	Exit		Exit
	Up / Channel+		Up
	Down /		Down
	Right / Vol+		Right
	Left / Vol-		Left
	OK		Ok
	Red / RCL		Red

Originalfernbedienung Ersatzfernbedienung

	Green / Pause		Green
	Green / Pause		Pause
	Yellow / SUB		Yellow
	Yellow / SUB		Subt
	Blue / Text		Blue
	Blue / Text		Text
	FAV		Pre Ch
	TV/R		TV/R
	EPG		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
9	9	9	9				
0	0	0	0				
VF	VF	APP MEDIA	Media				
SYS	SYS	HOME SMART	Smart				

