



Originalfernbedienung Ersatzfernbedienung

|   |              |   |              |
|---|--------------|---|--------------|
|    | Standby      |    | Power        |
|    | Open / Close |    | Eject        |
|    | 1            |    | 1            |
|    | 2            |    | 2            |
|    | 3            |    | 3            |
|    | 4            |    | 4            |
|    | 5            |    | 5            |
|    | 6            |    | 6            |
|    | 7            |    | 7            |
|    | 8            |    | 8            |
|  | 9            |    | 9            |
|  | 0            |    | 0            |
|  | Search       |  +  | Shift + TV/R |
|  | Clear        |    | Exit         |
|  | Program+     |    | Ch +         |
|  | Program-     |    | Ch -         |
|  | Return       |    | Back         |

Originalfernbedienung Ersatzfernbedienung

|   |              |   |         |
|---|--------------|---|---------|
|    | HDD/DVD      |    | Media   |
|    | Up           |    | Up      |
|    | Left         |    | Left    |
|    | Select       |    | Ok      |
|    | Right        |    | Right   |
|    | Down         |    | Down    |
|    | Setup        |    | Options |
|    | TV/DVD       |    | Smart   |
|    | Video Source |    | AV      |
|    | Function     |    | D. Menu |
|  | Playlist+    |  | Vol +   |
|  | Playlist-    |  | Vol -   |
|  | Watch TV     |  | TV/R    |
|  | Play/Pause   |  | Play    |
|  | Play/Pause   |  | Pause   |
|  | Stop         |  | Stop    |
|  | Record/DUB   |  | Rec     |





**Originalfernbedienung Ersatzfernbedienung**

|  |             |  |               |
|--|-------------|--|---------------|
|  | I << Skip   |  | I <<          |
|  | Skip >>I    |  | >>I           |
|  | << Search   |  | <<            |
|  | Search >>   |  | >>            |
|  | Edit        |  | Red           |
|  | Insert CHP. |  | Green         |
|  | Rec Mode    |  | Shift + Rec   |
|  | Timer       |  | Shift + AV    |
|  | Play Mode   |  | Shift + Play  |
|  | Repeat      |  | Text          |
|  | Zoom        |  | Shift + Eject |
|  | A-B         |  | Shift + Text  |
|  | Subtitle    |  | Subt          |
|  | Audio       |  | Dual          |
|  | Angle       |  | Format        |
|  | Title       |  | List          |
|  | Menu        |  | Menu          |

**Originalfernbedienung Ersatzfernbedienung**

|  |         |  |      |
|--|---------|--|------|
|  | Display |  | Info |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |
|  |         |  |      |

