

 

 

 

 

 

 

 

 

 
 
 

 
 
 

 

 
 
 


 
 
 
 

 

 

 

 

 

 

 

 

 
 




 
 
 



 





Originalfernbedienung Ersatzfernbedienung


 
 



 

 
 
 


 

 
 

 

 

 

 




 
 


 




	On		Shift + Power
	Standby		Power
	Sleep		Sleep
	Dimmer		Smart
	Status		Options
	Search		TV/R
	BD		1
	Tuner		2
	Band		3
	DVD		4
	Dock		5
	Shift		6
	TV		7
	Game		8
	SAT/CBL		9
	V.AUX		0
	Memory		Subt

Originalfernbedienung Ersatzfernbedienung

	Mode		Format
	CH+		Ch +
	CH-		Ch -
	Tuning Up		Shift + Ch +
	Tuning Down		Shift + Ch -
	Quick Select 1		Shift + 1
	Quick Select 2		Shift + 2
	Quick Select 3		Shift + 3
	Quick Select 4		Shift + 4
	Menu		Menu
	Audio Adjust		Dual
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Enter		Ok		Repeat Ipod		Text
	CH Level		Media		Random Ipod		Info
	Return		Back				
	Night		3D				
	Restorer		Exit				
	Tone		List				
	Mute		Mute				
	Surround Left		Shift + Left				
	Surround Right		Shift + Right				
	Audio Delay -		Shift + Vol -				
	Audio Delay +		Shift + Vol +				
	I<< Ipod		I<<				
	Stop Ipod		Stop				
	Play/Pause Ipod		Play				
	>>I Ipod		>>I				
	<< Ipod		<<				
	>> Ipod		>>				

