



**Originalfernbedienung    Ersatzfernbedienung**

	AVR/AVC On		Power
	AVR/AVC Off		Shift + Power
	Power Tv		TV/R
	Power VCR		Smart
	Power DVD/VDP		Media
	1		1
	2 / CD		2
	3 / DVD/VDP		3
	5 / VCR		4
	6		5
	7 / TV/DBS		6
	9 / CDR/TAPE		7
	0 / Tuner		8
	Shift		9
	4 / V.AUX		0
	8 / Input Mode		Guide
	Surround Mode		Pre Ch

**Originalfernbedienung    Ersatzfernbedienung**

	<< TAPE-VCR		Shift + <<
	TAPE-VCR Pause/Rev. Play		Shift + Play
	TAPE-VCR Play		Shift + Pause
	TAPE-VCR >>		Shift + >>
	Stop TAPE-VCR		Shift + Stop
	Channel+		Ch +
	Channel-		Ch -
	Disc Skip+		Blue
	Play		Play
	Stop		Stop
	Pause		Pause
	>>I		>>I
	I<<		I<<
	>>		>>
	<<		<<
	System/Setup		Menu
	Surround/Menu		D. Menu





**Originalfernbedienung Ersatzfernbedienung**

	T.Tone/Return		Back
	Status/Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	CH.Select/Select		Ok
	Master Volume		Vol +
	Master Volum		Vol -
	Muting		Mute
	Tv Volume+		Shift + Vol +
	Tv Volume-		Shift + Vol -
	Tv Channel+		Shift + Ch +
	Tv Channel-		Shift + Ch -

**Originalfernbedienung Ersatzfernbedienung**






