



**Originalfernbedienung    Ersatzfernbedienung**

	Left		Shift + Left
	Muting		Mute / Dimmer
	CD Play		Play / Slow
	CD Pause		Pause / Step / Freeze
	CD Stop		Stop / Hold
	CD <<		<< / Tune-
	CD >>		>> / Tune+
	CD I<<		I<< / Preset-
	CD >>I		>>I / Preset+
	T.Tone		Sound / Title
	PHONO		Audio / Lang I/II
	Surround		Eject / Surround
	Mode		D.Menu / Top
	System Setup		Setup / OPT /
	AVR/AVC		AV / Input / RDS
	Menu Next		Menu / Home
	Menu Up		Up

**Originalfernbedienung    Ersatzfernbedienung**

	Deck <		Left
	Deck >		Right
	Menu Down		Down
	Master Vol+		Vol+
	CH Select		Smart / List
	Tuner Channel+		CH+ / Page+
	Master Vol-		Vol-
	Tuner Channel-		CH- / Page-
	TV/DBS		1
	DVD/VDP		2
	CD		3
	VCR		4
	MD / TAPE MON		5
	TUNER		6
	TUNER		9
	Deck A/B		Yellow / YouTube / Repeat
	Deck Stop		Shift + Stop / Hold









**Originalfernbedienung    Ersatzfernbedienung**

	AVR/AVC		AV / Input / RDS
	Power VCR		Power
	Power DVD	 + 	Shift + Power
	PHONO	 + 	Shift + Sound / Title
	CD		3
	DVD/VDP		2
	TV/DBS		1
	VCR		4
	MD / TAPE MON		5
	TUNER		9
	TUNER		6
	Tuner Shift	 + 	Shift + 6
	Tuner Channel+		CH+ / Page+
	Tuner Channel-		CH- / Page-
	DVD Title		Sound / Title
	DVD Play		Play / Slow
	DVD Menu / Guide		Menu / Home

**Originalfernbedienung    Ersatzfernbedienung**

	DVD I<<		I<< / Preset-
	DVD Pause		Pause / Step / Freeze
	DVD >>I		>>I / Preset+
	DVD Display		Display / Media
	DVD Stop		Stop / Hold
	DVD Return		Back / Return
	DVD Setup		Setup / OPT /
	Up		Up
	Select		OK
	Master Vol+		Vol+
	Left		Left
	Down		Down
	Right		Right
	Master Vol-		Vol-
	T.Tone		Audio / Lang I/II
	Video Select	 + 	Shift + 4
	Mode		D.Menu / Top











































**Originalfernbedienung    Ersatzfernbedienung**

Muting		Mute / Dimmer
MD Play		Play / Slow
MD Pause		Pause / Step / Freeze
Deck Stop		Stop / Hold
Deck <<		<< / Tune-
Deck >>		>> / Tune+
MD I<<		I<< / Preset-
MD >>I		>>I / Preset+
T.Tone		Sound / Title
PHONO		Audio / Lang I/II
Surround		Eject / Surround
Mode		D.Menu / Top
System Setup		Setup / OPT /
AVR/AVC		AV / Input / RDS
Menu Next		Menu / Home
Menu Up		Up
Deck <		Left

**Originalfernbedienung    Ersatzfernbedienung**

Deck >		Right
Menu Down		Down
Master Vol+		Vol+
CH Select		Smart / List
Tuner Channel+		CH+ / Page+
Master Vol-		Vol-
Tuner Channel-		CH- / Page-
TV/DBS		1
DVD/VDP		2
CD		3
VCR		4
MD / TAPE MON		5
TUNER		6
TUNER		9
Deck A/B		Yellow / YouTube / Repeat
MD Stop		Shift + Stop /
MD <<		Shift + << /

Tune-



