 

 
 



 















 
 
 

 
 


 






Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Power DVD/VDP		Shift + 3
	Power VCR		Shift + 9
	Power TV		TV/R
	Mode		Yellow
	Mode Cinema		Green
	Mode Music		Shift + Red
	Mode DSP SIM.		Blue
			Shift + Yellow
	Mode Stereo		Shift + Green
	Virtual Surround		Options
	Mode 5CH		Red
	Input Phono		5
	Input CD		1
	Input Tuner		6
	Input DVD / VDP		3

Originalfernbedienung Ersatzfernbedienung

	Input TV/BDS		7
	Input VCR		9
	Input V.Aux		8
	Input Tape		2
	Tv Vol+		Shift + Vol +
	Tuning+		Shift + >>
	Tv Vol-		Shift + Vol -
	Tuning-		Shift + <<
	Channel+		Ch +
	Tv CH+		Shift + Ch +
	Channel-		Ch -
	Tv CH-		Shift + Ch -
	Mode		D. Menu
	Band		Media
	Shift		3D
	Play CD/MD/CDR-DVD/		Play
	Stop CD/MD/CDR-DVD/ VDP		Stop





Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Pause		Pause
	Disc Skip+		List
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Setup		Menu
	Surround		Subt
	Up		Up
	Left		Left
	CH.Select/Select		Ok
	Right		Right
	Down		Down
	Display		Info

Originalfernbedienung Ersatzfernbedienung

	Return		Back
	Test Tone		Text
	Video Select		Format
	Dimmer		Sleep
	Speaker		Dual
	Input Mode		4
	Input Analog		Guide
	Input Ext-In		Pre Ch
	Tuner Mode		Smart

