 




Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Zone Device On		Smart
	Zone Device Off		Shift + Smart
	Net/USB		Shift + 1
	iPod		Shift + 2
	DVD		Shift + 3
	BD		Shift + 4
	Tuner/DTU		Shift + 5
	Dock		Shift + 6
	SAT TU		Shift + 7
	SAT/CBL		Shift + 8
	Game		Shift + 9
	V.AUX		Shift + Guide
	Phono		Shift + 0
	CD		Shift + Pre Ch
	DVR		Blue

Originalfernbedienung Ersatzfernbedienung




 














 
 

 
 


 
 



 

	TV		Shift + Media
	Monitor Select		Media
	Quick Select 1		Red
	Quick Select 2 (SAT/CBL)		Green
	Quick Select 3 (Dock)		Yellow
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Source Select		AV
	Menu		Menu
	CH Level/Top		Info
	Search/Setup		Options
	Return		Back
	Up		Up
	Down		Down




Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Enter		Ok
	<</Band		<<
	Play		Play
	>>/Mode		>>
	I<</Tuning-		I<<
	Pause		Pause
	Stop		Stop
	>>I/Tuning+		>>I
	Multeq		Subt
	Dyn EQ/Vol		Text
	A-DSX		TV/R
	Restorer		Exit
	Standard		Dual
	D/ST		Format
	Simulation		3D

Originalfernbedienung Ersatzfernbedienung

	Pure		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10/Memory		Guide
	Shift/Link Menu		D. Menu
	Power Tv		Shift + TV/R
	Input Tv		Shift + AV
	Sleep		Sleep
	Party		List





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Zone Device On		Smart
	Zone Device Off		Shift + Smart
	Net/USB		Shift + 1
	iPod		Shift + 2
	DVD		Shift + 3
	BD		Shift + 4
	Tuner/DTU		Shift + 5
	Dock		Shift + 6
	SAT TU		Shift + 7
	SAT/CBL		Shift + 8
	Game		Shift + 9
	V.AUX		Shift + Guide
	Phono		Shift + 0
	CD		Pre Ch
	DVR		Blue









 
 

 
 
 
Originalfernbedienung Ersatzfernbedienung

	TV		Media
	Quick Select 1		Red
	Quick Select 2 (SAT/CBL)		Green
	Quick Select 3 (Dock)		Yellow
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Menu		Menu
	CH Level/Top		Info
	Search/Setup		Options
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	<</Band		<<
	Play		Play
	>>/Mode		>>
	I<</Tuning-		I<<
	Pause		Pause
	Stop		Stop
	>>I/Tuning+		>>I
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	0		0
	+10/Memory		Guide
	Shift/Link Menu		D. Menu
	Power Tv		TV/R
	Input TV		AV
	Sleep		Sleep
	Party		List









Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off	 + 	Shift + Power
	Zone Device On		Smart
	Zone Device Off	 + 	Shift + Smart
	Net/USB	 + 	Shift + 1
	iPod	 + 	Shift + 2
	DVD	 + 	Shift + 3
	BD	 + 	Shift + 4
	Tuner/DTU	 + 	Shift + 5
	Dock	 + 	Shift + 6
	SAT TU	 + 	Shift + 7
	SAT/CBL	 + 	Shift + 8
	Game	 + 	Shift + 9
	V.AUX	 + 	Shift + Guide
	Phono	 + 	Shift + 0
	CD		Pre Ch
	DVR		Blue

Originalfernbedienung Ersatzfernbedienung

	TV		Media
	Quick Select 1		Red
	Quick Select 2 (SAT/CBL)		Green
	Quick Select 3 (Dock)		Yellow
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Menu		Menu
	CH Level/Top		Info
	Search/Setup		Options
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	<</Band		<<
	Play		Play
	>>/Mode		>>
	I<</Tuning-		I<<
	Pause		Pause
	Stop		Stop
	>>I/Tuning+		>>I
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



 


 
 


Originalfernbedienung Ersatzfernbedienung

	0		0
	+10/Memory		Guide
	Shift/Link Menu		D. Menu
	Power Tv		TV/R
	Input Tv		AV
	Party		List
	Sleep		Sleep


 

 
 
 
 











 



















Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Zone Device On		Smart
	Zone Device Off		Shift + Smart
	NET/USB		Shift + 1
	iPod		Shift + 2
	DVD		Shift + 3
	BD		Shift + 4
	Tuner/DTU		Shift + 5
	Dock		Shift + 6
	SAT TU		Shift + 7
	SAT/CBL		Shift + 8
	Game		Shift + 9
	V.AUX		Shift + Guide
	Phono		Shift + 0
	CD		Pre Ch
	DVR		Blue

Originalfernbedienung Ersatzfernbedienung

	TV		Media
	Quick Select 1		Red
	Quick Select 2 (SAT/CBL)		Green
	Quick Select 3 (Dock)		Yellow
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Search/Setup		Options
	<</Band		<<
	Play		Play
	>>/Mode		>>
	I<</Tuning-		I<<
	Pause		Pause
	Stop		Stop
	>>I/Tuning+		>>I




Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10/Memory		Guide
	Power Tv		TV/R
	Shift/Link Menu		D. Menu
	Input Tv		AV
	Sleep		Sleep
	Party		List

Originalfernbedienung Ersatzfernbedienung

