





 



 



 



 

 
























**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Power Tv	 + 	Shift + Power
	1	 1	1
	2	 2	2
	3	 3	3
	4	 4	4
	5	 5	5
	6	 6	6
	7	 7	7
	8	 8	8
	9	 9	9
	Txt		Text / Goto
	0	 0	0
	[<>]/4:3/16:9		Picture / Format
	TV		Subtitle / EQ
	Radio		TV/Radio /
	Up		Up

**Originalfernbedienung    Ersatzfernbedienung**

	Help		Guide / EPG / -/--
	Left		Left
	OK		OK
	Right		Right
	Music		Audio / Lang I/II
	Down		Down
	WWW		Display / Media
	Video	 + 	Shift + 4
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Vol+ Tv	 + 	Shift + Vol+
	M		Menu / Home
	Prog+		CH+ / Page+
	Vol-		Vol-



