
 




 
 
 
 

 

 
 
 
 




 

 
 
 
 




 
 
 






Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Stop		Stop
Slow Up		Ch +
Auto/Track		Red
Pause		Pause
Subt.		Subt
Rep/A-B	 + 	Shift + Text
Title		List
Repeat/1/All		Text
Zoom	 + 	Shift + Eject
DVD/TV		Media
Menu		Menu
Menu Up		Up
Display		Info
Return		Back

Originalfernbedienung Ersatzfernbedienung

Menu Left		Left
Next		>>
Progr.		Sleep
Prev.		<<
OK Enter		Ok
Top Menu	 + 	Shift + Menu
Menu Right		Right
Menu Down		Down
Volume+		Vol +
Volume-		Vol -
1		1
2		2
3		3
4		4
Mark	 + 	Shift + Pre Ch
Digest	 + 	Shift + Info
Rewind		<<



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Play		Np	 +  Shift + Subt
Record		Input Source	 AV
F.Forward		Setup	 Options
R/L		Audio	 Dual
Pbc		3D	 3D
5			
6			
7			
8			
Video			
9			
Syst.Preset			
+10			
Angle			
0			
C/CH			
Open/Close			

