












 



 



 
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	→0←		Options
	T.R.		D. Menu
	[00:00]		Guide
	o/[oo]		Pre Ch
	Showview		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / VCR		TV/R









Originalfernbedienung Ersatzfernbedienung

	AV		AV
	Pause		Pause
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Rec		Rec
	Eject		Eject
	SP / LP		3D
	Up / PR+		Up
	>		Shift + Play
	Up / PR+		Ch +
	Down / PR-		Down
	Down / PR-		Ch -
	Right		Right
	Left		Left
	OK		Ok





Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	PAL / SEC		Format
	Index-		I<<
	Index+		>>I
	A.SEL		Smart

Originalfernbedienung Ersatzfernbedienung

