

 



 
 
 

 


 








 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Eject		Eject
	Setup		Options
	Angle		Media
	3D		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	+10		Guide

Originalfernbedienung Ersatzfernbedienung

	Return		Back
	Display		Info
	Title/PBC		TV/R
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Play		Play
	Play		Ok
	Search		Shift + TV/R
	Mark		Pre Ch
	Program		Sleep
	Zoom		Shift + Eject
	Pause		Pause
	II>		Rec
	Stop		Stop



