



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Eject
	Mute		Mute
	PMode		Shift + Format
	SMode		Shift + Dual
	Nicam		Dual
	Aspect		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

 
 
 
 
 


 

 
 
 
 
 

 



 

 

 

 

 
 

 
 


Originalfernbedienung Ersatzfernbedienung

	-/--		Shift + Guide
	Recall		Back
	Red / DVD P.Scan		Red
	Green / DVD Goto		Green
	Yellow / DVD		Yellow
	Blue / DVD Media		Blue
	Blue / DVD Media		Media
	PR+ / Up		Ch +
	PR+ / Up		Shift + Up
	PR- / Down		Ch -
	PR- / Down		Shift + Down
	Vol+ / Right		Vol +
	Vol+ / Right		Shift + Right
	Vol- / Left		Vol -
	Vol- / Left		Shift + Left
	Menu		Menu
	Source		AV


 


 
 

 









Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Display Info		Info
	Enter		Shift + Ok
	TXT / DVD Repeat		Text
	Hold / DVD A-B		TV/R
	Lucidity / DVD Language		Options
	Subpage / DVD Subtitle		Subt
	Index / DVD Setup		Smart
	Size / DVD		Shift + D. Menu
	Reveal / DVD Title		List
	Cancel / DVD		Shift + Eject
	DTV Menu / DVD		D. Menu
	DTV Menu / DVD		<<
	DVD >>		>>
	FAV / DVD Play/Pause		Pre Ch
	FAV / DVD Play/Pause		Play
	FAV / DVD Play/Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	Exit / DVD Stop		Exit
	Exit / DVD Stop		Stop
	Page Up / DVD		Shift + Ch +
	Page Down / DVD		Shift + Ch -
	Up		Up
	Left		Left
	OK / DVD Select		Ok
	Right		Right
	Down		Down
	EPG / DVD □		Guide

