



### Originalfernbedienung Ersatzfernbedienung

|                                                                                     |            |                                                                                     |                         |
|-------------------------------------------------------------------------------------|------------|-------------------------------------------------------------------------------------|-------------------------|
|    | Display    |    | Display / Media         |
|    | Power      |    | Power                   |
|    | Normal     |    | Shift + Display / Media |
|    | Tv/Av/DVD  |    | TV/Radio /              |
|    | Sleep      |    | Sleep / Timer           |
|    | 1          |    | 1                       |
|    | 2          |    | 2                       |
|    | 3          |    | 3                       |
|    | 4          |    | 4                       |
|    | 5          |    | 5                       |
|    | 6          |    | 6                       |
|  | 7          |  | 7                       |
|  | 8          |  | 8                       |
|  | 9          |  | 9                       |
|  | Aspect     |  | Smart / List            |
|  | 0          |  | 0                       |
|  | Sound Mode |  | Sound / Title           |

### Originalfernbedienung Ersatzfernbedienung

|                                                                                       |          |                                                                                       |                  |
|---------------------------------------------------------------------------------------|----------|---------------------------------------------------------------------------------------|------------------|
|    | Vol-     |    | Vol-             |
|    | Tv Menu  |    | Menu / Home      |
|    | Vol+     |    | Vol+             |
|    | Up       |    | Up               |
|    | PR+      |    | CH+ / Page+      |
|    | Left     |    | Left             |
|    | Right    |    | Right            |
|    | Mute     |    | Mute / Dimmer    |
|    | PR-      |    | CH- / Page-      |
|    | Down     |    | Down             |
|    | OK/Enter |    | OK               |
|  | DVD Menu |  | D.Menu / Top     |
|  | o))      |  | AV / Input / RDS |
|  | I<<      |  | I<< / Preset-    |
|  | >>I      |  | >>I / Preset+    |
|  | [...]    |  | Subtitle / EQ    |
|  | <<       |  | << / Tune-       |



[illegible]