 




Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Audio		Audio / Lang I/II
	FAV+		Shift + CH+ /
	FAV		Fav / Marker / PC

Originalfernbedienung    Ersatzfernbedienung

	FAV-		Shift + CH- /
	CH+		CH+ / Page+
	P.Mode		Picture / Format
	Vol+		Vol+
	CH-		CH- / Page-
	S.Mode		Sound / Title
	Vol-		Vol-
	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format
	Info		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down





**Originalfernbedienung   Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	Text		Text / Goto
	Index		Display / Media
	Play/Mix		Play / Slow
	Pause		Pause / Step / Freeze
	Stop/Reveal		Stop / Hold
	<</Hold		<< / Tune-
	<</Hold	+	Shift + Stop /
	>>/Subpage		>> / Tune+
	Size		Zoom / Size
	I<<		I<< / Preset-
	>>I/Cancel		>>I / Preset+
	T-Shift		Smart / List
	Tv/Radio		TV/Radio /
	Rec		Rec / Rec Mode
	EPG		Guide / EPG / -/--
	Red		Red / Netflix / Search

**Originalfernbedienung   Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

