 



 



















 







 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[X]		Exit / Cancel / Clear
	[♦]		Zoom / Size
	[+]		Stop / Hold
	[?]/[:≡]		Play / Slow
	I.S.		Smart / List
	[i+]		Info / Angle
	Sleep		Sleep / Timer
	[<>]		Setup / OPT /
	Smart ♪		Sound / Title
	Radio		TV/Radio /
	Smart []		Picture / Format
	Menu		Menu / Home
	Up		Up
	[≡]		Text / Goto
	OK		OK
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Vol+		Vol+
	Down		Down
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung Ersatzfernbedienung








 
 










	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	I-II		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

 

 



 



 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Prog		TV/Radio /
	>>		>> / Tune+
	Menu		Menu / Home
	Up		Up
	OK		OK
	Left		Left
	Right		Right
	Down		Down
	P+		CH+ / Page+
	P-		CH- / Page-
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0

