






































 
 




Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute / Dimmer
	i		Info / Angle
	Up / P+		Up
	Up / P+		CH+ / Page+
	Down / P-		Down
	Down / P-		CH- / Page-

Originalfernbedienung    Ersatzfernbedienung

	Right / Vol+		Right
	Right / Vol+		Vol+
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	TV		TV/Radio /
	Red / Display		Red / Netflix / Search
	Red / Display		Display / Media
	Green / Audio		Green / APP / Repeat
	Green / Audio		Audio / Lang I/II
	Yellow / PIP		Yellow / YouTube / Repeat
	Blue / VT		Blue / Prime Video / Random
	F1		Shift + 1
	F2		Shift + 2
	F3		Shift + 3
	F4		Shift + 4

