



















 















 





















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-------------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Sound |  | Sound / Title |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | +10 |  | Guide / EPG / -/- |
|  | Up |  | Up |
|  | Left |  | Left |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------------------|
|  | Ent |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Function |  | Smart / List |
|  | Return |  | Back / Return |
|  | < Slow |  | CH- / Page- |
|  | Slow > |  | CH+ / Page+ |
|  | Pause |  | Pause / Step / Freeze |
|  | Prev / Preset- |  | I<< / Preset- |
|  | Next / Preset+ |  | >>I / Preset+ |
|  | Stop |  | Stop / Hold |
|  | Play |  | Play / Slow |
|  | << / Tuning- |  | << / Tune- |
|  | >> / Tuning+ |  | >> / Tune+ |
|  | Angle |  | Info / Angle |
|  | Audio |  | Audio / Lang I/II |
|  | Clear |  | Exit / Cancel / Clear |



