
 
















 






 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	16:9		Picture / Format
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back / Return
	Repeat		Shift + Green / APP / APP / REPEAT
	List Fav		Smart / List
	List Fav		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Reveal / EPG		Guide / EPG / -/-
	Source		AV / Input / RDS
	Info		Info / Angle
	Menu		Menu / Home
	Red		Red / Netflix / Search
	Up		Up
	Yellow		Yellow / YouTube / Repeat
	Left		Left
	OK		OK
	Right		Right
	Green		Green / APP / Repeat
	Down		Down
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	P+		CH+ / Page+
	Vol-		Vol-



