



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------------|
|  | Standby |  | Power |
|  | Open / Close |  | Eject |
|  | Repeat |  | Text |
|  | A-B |  | Shift + Text |
|  | Program |  | Sleep |
|  | Mute |  | Mute |
|  | Y.Pb.Pr |  | TV/R |
|  | Dolby PL II |  | Dual |
|  | Display |  | Info |
|  | << Rev |  | << |
|  | >> Fwd |  | >> |
|  | I<< Prev |  | I<< |
|  | >>I Next |  | >>I |
|  | Step / Pause |  | Pause |
|  | Stop |  | Stop |
|  | Volume + |  | Vol + |
|  | Volume - |  | Vol - |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------------|
|  | Title PBC |  | Smart |
|  | Menu |  | Menu |
|  | Setup |  | Options |
|  | Return |  | Back |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Play |  | Play |
|  | Play |  | Ok |
|  | Audio |  | Shift + Dual |
|  | Subtitle |  | Subt |
|  | Angle |  | 3D |
|  | Clear |  | Exit |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |



