




 
 


 

 

 
 


 

 



 






 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Audio		Dual
	TV / STB		Shift + TV/R
	TV / R		TV/R
	Sleep		Sleep
	SUB		Subt
	TXT		Text
	P / N		Shift + 1
	Recall		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	PGUP		Vol +
	PGDN		Vol -
	SAT		Shift + AV
	FAV +		Ch +
	FAV -		Ch -
	EPG		Guide
	Fav		Shift + Pre Ch
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Red		Red		<<		<<
	Green		Green		>>		>>
	Yellow		Yellow		Play / Pause		Play
	Blue		Blue		> <		Shift + Pause
	Pause		Pause		<<		<<
	Zoom		Eject		>>		>>
	Edit		Format				
	Info		Info				
	USB		AV				
	MP3		Media				
	JPEG		Smart				
	PVR List		List				
	A - B		Back				
	T.S.		Shift + 2				
	Goto		Options				
	Stop		Stop				
	Rec		Rec				

