













 





 











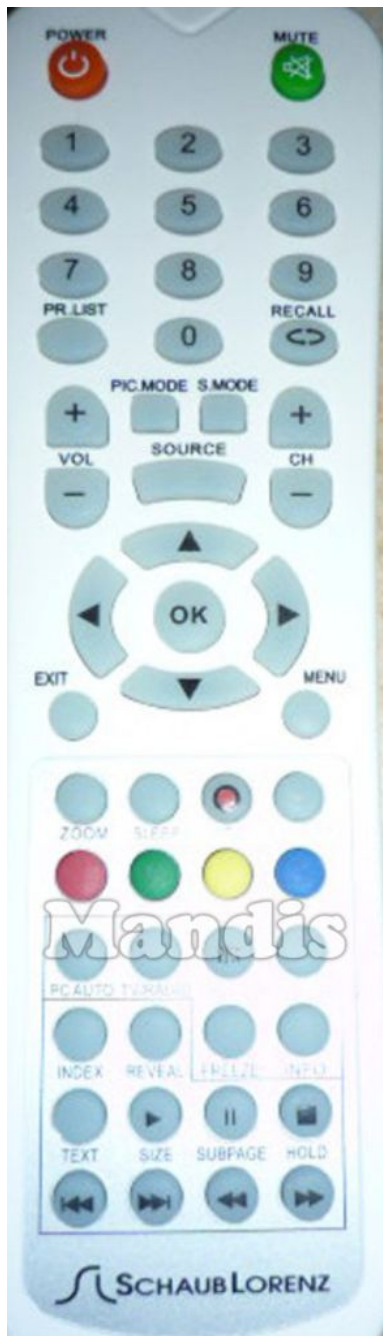
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PR.List		Smart / List
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Pic.Mode		Picture / Format
	S.Mode		Sound / Title










 




Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Menu		Menu / Home
	Zoom		Zoom / Size
	Sleep		Sleep / Timer
	Rec		Rec / Rec Mode
	Rec List		Shift + Rec / Rec Mode
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat







Originalfernbedienung Ersatzfernbedienung

	Yellow	 REPEAT A-B	Yellow / YouTube / Repeat
	Blue	 RANDOM	Blue / Prime Video / Random
	PC Auto		Eject / Surround
	Tv/Radio		TV/Radio /
	I/II/Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Index		Display / Media
	Reveal		Shift + Back / Return
	Freeze		Shift + Pause / Step /
	Info		Info / Angle
	Text		Text / Goto
	Play/Size		Play / Slow
	Pause/Subpage		Pause / Step / Freeze
	Stop/Hold		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-

Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
---	----	---	------------

