














 

 



















**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtl		Subt
	Tv/SAT		TV/R
	16:9		Format
	Timer		AV
	Menu		Menu

**Originalfernbedienung    Ersatzfernbedienung**

	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	TXT		Text
	EPG		Guide
	Info		Info
	Audio		Dual
	M-P		Media
	↑		>>
	↓		<<





Originalfernbedienung Ersatzfernbedienung

	FAV		Pre Ch
	Recall		Back
	Red/SAT		Red
	Green/Zoom		Green
	Yellow/Pause		Yellow
	Blue/Tv/Radio		Blue

Originalfernbedienung Ersatzfernbedienung