



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	A/B		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	SFI/EPG		Guide
	Recall/Exit		Exit
	Info		Info
	Tv/Radio		TV/R
	Menu		Menu
	Prog+		Ch +
	Prog-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Hilfe		Options
	TXT		Text





Originalfernbedienung Ersatzfernbedienung

⏹ STOP	Stop	■ TIMER AV	Stop AV
⏻ EXT	EXT	⌂ HOME SMART	Smart
✓	V		

Originalfernbedienung Ersatzfernbedienung

