



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	V.Format		Shift + Picture / Format
	Sleep		Sleep / Timer
	Text		Text / Goto
	TV / Radio		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[[≡]]		Smart / List
	0		0







Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	Vol -		Vol-
	Vol +		Vol+
	CH -		CH- / Page-
	CH +		CH+ / Page+
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Page Down		Shift + CH- /
	Down		Down
	Page Up		Shift + CH+ /
	FAV		Fav / Marker / PC
	Guide		Guide / EPG / -/-
	Info		Info / Angle





Originalfernbedienung Ersatzfernbedienung

	✓	 Display / Media
	Red	 Red / Netflix / Search
	Green	 Green / APP / Repeat
	Yellow / Audio	 Yellow / YouTube / Repeat
	Yellow / Audio	 Audio / Lang I/II
	Blue / Subtitle	 Blue / Prime Video / Random
	Blue / Subtitle	 Subtitle / EQ
	Play	 Play / Slow
	Stop	 Stop / Hold
	Pause	 Pause / Step / Freeze
	Rec	 Rec / Rec Mode
	>[≡]	 Shift + Text /
	I>	 Shift + Pause / Step /
	<<	 << / Tune-
	>>	 >> / Tune+
	Zoom	 Zoom / Size
	> <	 Shift + Stop /

Hold

Originalfernbedienung Ersatzfernbedienung

	I<<	 I<< / Preset-
	>>	 >> / Preset+
	SAT	 Shift + 0
	Picture	 Picture / Format
	Book	 Setup / OPT /
	Book 2	 Shift + Setup / OPT / Tools

