



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|--------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Back |  | Back |
|  | Fav |  | Pre Ch |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | EPG |  | Guide |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------|
|  | i |  | Info |
|  | Up |  | Up |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Left |  | Left |
|  | OK / List |  | Ok |
|  | OK / List |  | List |
|  | V + |  | Vol + |
|  | V - |  | Vol - |
|  | TV / R |  | TV/R |
|  | SAT |  | AV |
|  | P + |  | Ch + |
|  | P - |  | Ch - |
|  | Red / F1 |  | Red |
|  | Green / F2 |  | Green |
|  | Yellow / F3 |  | Yellow |
|  | Blue / F4 |  | Blue |



