


 



 

 
 
 
 


 







 

 







 



 
 
 
 
 
 
 
 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		MUTE
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	←PR		BACK
	EPG		-/-- / EPG
	Menu		MENU
	PR+		CH +

Originalfernbedienung Ersatzfernbedienung

	PR-		CH -
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	OK/List		OK
	Vol+		VOL +
	Vol-		VOL -
	Info		INFO
	Exit		EXIT
	↑		Fast Forward
	↓		Rewind
	Pause		Pause
	Red		Red (A)
	Green		Green (B)
	Yellow		Yellow (C)
	Blue		Blue (D)





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Audio		Audio
	TXT		TEXT
	[...]		Subt.
	Audio L/R		OPT+
	[+]		WIDE
	FAV		P/C / FAV
	UHF		VOD
	PAL/NTSC		V-FOR
	Tv/AV		SRC

