





 













 
















**Originalfernbedienung    Ersatzfernbedienung**

|   |        |   |                   |
|---|--------|---|-------------------|
|    | Power  |    | Power             |
|    | Mute   |    | Mute / Dimmer     |
|    | 1      |    | 1                 |
|    | 2      |    | 2                 |
|    | 3      |    | 3                 |
|    | 4      |    | 4                 |
|    | 5      |    | 5                 |
|    | 6      |    | 6                 |
|    | 7      |    | 7                 |
|    | 8      |    | 8                 |
|    | 9      |    | 9                 |
|    | 0      |    | 0                 |
|   | FAV    |   | Fav / Marker / PC |
|  | Recall |  | Back / Return     |
|  | P.Mode |  | Picture / Format  |
|  | S.Mode |  | Sound / Title     |
|  | Audio  |  | Audio / Lang I/II |

 

















 

 









**Originalfernbedienung    Ersatzfernbedienung**

|   |        |   |                       |
|---|--------|---|-----------------------|
|    | Menu   |    | Menu / Home           |
|    | Info   |    | Info / Angle          |
|    | Source |    | AV / Input / RDS      |
|    | Exit   |    | Exit / Cancel / Clear |
|    | Up     |    | Up                    |
|    | Down   |    | Down                  |
|    | Left   |    | Left                  |
|    | Right  |    | Right                 |
|    | OK     |    | OK                    |
|    | Vol+   |    | Vol+                  |
|    | Vol-   |    | Vol-                  |
|    | FAV+   |    | Shift + CH+ /         |
|   | FAV-   |   | Shift + CH- /         |
|  | EPG    |  | Guide / EPG / -/-     |
|  | CH+    |  | CH+ / Page+           |
|  | CH-    |  | CH- / Page-           |
|  | Aspect |  | D.Menu / Top          |

















**Originalfernbedienung    Ersatzfernbedienung**

|   |            |  |                            |
|---|------------|--|----------------------------|
|    | Sleep      |     | Sleep / Timer              |
|    | Rec        |     | Rec / Rec Mode             |
|    | Tv/R       |     | TV/Radio /                 |
|    | Freeze     |     | Pause / Step / Freeze      |
|    | Sub-T      |     | Subtitle / EQ              |
|    | PVR-List   |     | Smart / List               |
|    | TSR        |    | Shift + TV/Radio / Program |
|    | TTX        |     | Text / Goto                |
|    | Hold       |    | Shift + Stop /             |
|    | Reveal     |     | Display / Media            |
|    | Sub-P      |    | Shift + Subtitle / EQ      |
|  | Index      |  | Shift + Info / Angle       |
|  | Zoom       |   | Zoom / Size                |
|  | Play/Pause |   | Play / Slow                |
|  | Stop       |   | Stop / Hold                |
|  | <<         |   | << / Tune-                 |
|  | >>         |   | >> / Tune+                 |

**Originalfernbedienung    Ersatzfernbedienung**

|   |        |   |                             |
|---|--------|---|-----------------------------|
|  | I<<    |  | I<< / Preset-               |
|  | >>I    |  | >>I / Preset+               |
|  | Red    |  | Red / Netflix / Search      |
|  | Green  |  | Green / APP / Repeat        |
|  | Yellow |  | Yellow / YouTube / Repeat   |
|  | Blue   |  | Blue / Prime Video / Random |

