



 


 
 
 
 

 

 



 
 
 

 
 

 
 

 

 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	DVB/Analogue		Smart
	AV		AV
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	S.Effect		Media
	▼/O/I/II	 + 	Shift + Dual

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	PR/Page+		Ch +
	PR/Page-		Ch -
	Up/[≡▲]		Up
	Down/[≡▼]		Down
	Right		Right
	Left		Left
	OK/Select		Ok
	Guide		Guide
	Subtitle		Subt
	Language		Dual
	Favourite		Pre Ch
	Prev PR		Back
	Menu		Menu
	Aspect		3D
	Normal		Options





**Originalfernbedienung Ersatzfernbedienung**

	[i]/Recall		Info
	Cancel/Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]/Text		Text
	[≡?]/Reveal		TV/R
	[≡x]/T.Cancel		Eject
	[≡♦]/Size		Format
	[≡o]/Subcode		D. Menu
	[≡+]/Hold		Shift + TV/R
	[≡i]/Index		List
	Game		Shift + Smart

**Originalfernbedienung Ersatzfernbedienung**