



**Originalfernbedienung Ersatzfernbedienung**

	Power On		Power
	Mute		Mute
	TV/Radio		TV/R
	FAV		Pre Ch
	TV/DBS		Smart
	VCR/DBS		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Find		3D

**Originalfernbedienung Ersatzfernbedienung**

	Recall		Back
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK / List		Ok
	OK / List		List
	Menu		Menu
	Exit		Exit
	PG/UP		>>
	PG/DW		<<
	Red / Pause		Red
	Red / Pause		Pause



