













 





 
 
 




 










 









Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Red / UHF		Red / Netflix / Search
	Green / Audio		Green / APP / Repeat
	Green / Audio		Audio / Lang I/II
	Yellow / Pause		Yellow / YouTube / Repeat
	Yellow / Pause		Pause / Step / Freeze
	Blue / Recall		Blue / Prime Video / Random
	Blue / Recall		Back / Return
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide / EPG / -/-
	Group		Smart / List
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Page+		Shift + CH+ /
	Page-		Shift + CH- /

Page-



