




**Originalfernbedienung Ersatzfernbedienung**

|   |               |   |                        |
|---|---------------|---|------------------------|
|    | Ouvrir/Fermer |    | Eject / Surround       |
|    | Video/Y       |    | AV / Input / RDS       |
|    | Marche        |    | Power                  |
|    | Menu          |    | Menu / Home            |
|    | Mode          |    | Smart / List           |
|    | Affichage     |    | Display / Media        |
|    | NTSC/PAL      |    | Picture / Format       |
|    | Chercher      |    | Red / Netflix / Search |
|    | 1             |    | 1                      |
|    | 2             |    | 2                      |
|   | 3             |   | 3                      |
|  | Angle         |  | Info / Angle           |
|  | 4             |  | 4                      |
|  | 5             |  | 5                      |
|  | 6             |  | 6                      |
|  | Titre         |  | Sound / Title          |
|  | 7             |  | 7                      |

**Originalfernbedienung Ersatzfernbedienung**

|   |            |   |                       |
|---|------------|---|-----------------------|
|    | 8          |    | 8                     |
|    | 9          |    | 9                     |
|    | Sous Titre |    | Subtitle / EQ         |
|    | Annul      |    | Exit / Cancel / Clear |
|    | 0          |    | 0                     |
|    | 10+        |    | Guide / EPG / -/-     |
|    | Config     |    | Setup / OPT /         |
|    | Retour     |    | Back / Return         |
|    | Up         |    | Up                    |
|    | Left       |    | Left                  |
|   | Valider    |   | OK                    |
|  | Right      |  | Right                 |
|  | Arreter    |  | Stop / Hold           |
|  | Down       |  | Down                  |
|  | Zoom       |  | Zoom / Size           |
|  | Pause      |  | Pause / Step / Freeze |
|  | Lecture    |  | Play / Slow           |



