 




 

 

 
 
 
 
 
 

 
 




 







 




 
 






 
 
 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	PREMIUM NET		Smart
	Guida		Guide
	Menu		Menu
	Info		Info
	Vol +		Vol +
	Vol -		Vol -
	P +		Ch +
	P -		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	Back		Back
	Exit / Stop		Exit
	Exit / Stop		Stop
	<< REW		<<
	>> FWD		>>
	Pause / Play		Play
	Pause / Play		Pause
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

0	0	0	0
Lista	Lista	DISC NAV LIST	List
Opzioni	Opzioni	SETTINGS OPT	Options
TEXT	Text	REPEAT TEXT	Text
TVIRAD	TV / Rad	SEARCH TV/R	TV/R
APP	APP	SHIFT + APP MEDIA	Shift + Media
Source	Source	TIMER AV	AV
PREV	I<< Prev	<<	I<<
REC	Rec	REC MODE	Rec
FILE	File	APP MEDIA	Media
NEXT	>>I Next	>>I	>>I

Originalfernbedienung Ersatzfernbedienung

