



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|------------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | REC |  | Rec / Rec Mode |
|  | 0 / AV |  | 0 |
|  | 0 / AV |  | AV / Input / RDS |
|  | OPT |  | Setup / OPT / |
|  | Red / << |  | << / Tune- |
|  | Red / << |  | Red / Netflix / Search |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|-----------------------------|
|  | Green / Stop |  | Stop / Hold |
|  | Green / Stop |  | Green / APP / Repeat |
|  | Yellow / |  | Play / Slow |
|  | Yellow / |  | Yellow / YouTube / Repeat |
|  | Blue / Aspect / |  | Picture / Format |
|  | Blue / Aspect / |  | Blue / Prime Video / Random |
|  | Blue / Aspect / |  | >> / Tune+ |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | SFI / EPG |  | Guide / EPG / -/- |
|  | Exit / Recall |  | Exit / Cancel / Clear |
|  | Exit / Recall |  | Back / Return |
|  | Info |  | Info / Angle |
|  | Prog + |  | CH+ / Page+ |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|------------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | REC |  | Rec / Rec Mode |
|  | 0 / AV |  | AV / Input / RDS |
|  | 0 / AV |  | 0 |
|  | OPT |  | Setup / OPT / |
|  | Red / << |  | << / Tune- |
|  | Red / << |  | Red / Netflix / Search |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|-----------------------------|
|  | Green / Stop |  | Green / APP / Repeat |
|  | Green / Stop |  | Stop / Hold |
|  | Yellow / |  | Play / Slow |
|  | Yellow / |  | Yellow / YouTube / Repeat |
|  | Blue / >> / |  | >> / Tune+ |
|  | Blue / >> / |  | Picture / Format |
|  | Blue / >> / |  | Blue / Prime Video / Random |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | SFI / EPG |  | Guide / EPG / -/- |
|  | Exit / Recall |  | Exit / Cancel / Clear |
|  | Exit / Recall |  | Back / Return |
|  | Info |  | Info / Angle |
|  | Prog + |  | CH+ / Page+ |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|------------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | REC |  | Rec / Rec Mode |
|  | 0 / AV |  | AV / Input / RDS |
|  | 0 / AV |  | 0 |
|  | OPT |  | Setup / OPT / |
|  | Red / << |  | Red / Netflix / Search |
|  | Red / << |  | << / Tune- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|-----------------------------|
|  | Green / Stop |  | Green / APP / Repeat |
|  | Green / Stop |  | Stop / Hold |
|  | Yellow / |  | Play / Slow |
|  | Yellow / |  | Yellow / YouTube / Repeat |
|  | Blue / >> / |  | Blue / Prime Video / Random |
|  | Blue / >> / |  | Picture / Format |
|  | Blue / >> / |  | >> / Tune+ |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | SFI / EPG |  | Guide / EPG / -/- |
|  | Exit / Recall |  | Exit / Cancel / Clear |
|  | Exit / Recall |  | Back / Return |
|  | Info |  | Info / Angle |
|  | Prog + |  | CH+ / Page+ |



