



 

 
 









 
 

 
 








**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	TV / Radio		TV/R

**Originalfernbedienung    Ersatzfernbedienung**

	Prog+		Ch +
	Prog-		Ch -
	Menu		Menu
	List		List
	Back		Back
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Red / Timer		Red
	Red / Timer		AV
	Green / FAV		Green
	Green / FAV		Pre Ch
	Yellow / Repeat		Yellow
	Blue / Goto		Blue




**Originalfernbedienung Ersatzfernbedienung**

	Audio		Dual
	SUB		Subt
	Yellow / Repeat	 + 	Shift + Text
	Text		Text
	File		Media
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	I<< PREV		I<<
	>>I NEXT		>>I
	<< REW		<<
	>> FWD		>>

**Originalfernbedienung Ersatzfernbedienung**