



 



 




 


 

 


 


 
 
 
 
 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	AV		AV
	TV / Rad		TV/R
	Audio		Dual
	SUB		Subt
	APP		Media
	Guida		Guide
	Lista		Shift + Ok
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Up		Up
	Left		Left
	OK		Ok

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	Back		Back
	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



