








 



 









 

 

 



 
 










 
 

 


 
 


 


 



 
 





 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Sleep		Sleep
	Picture Mode		Format
	Sound Mode		Shift + Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[<>]/Aspect		3D
	Guide		Guide

Originalfernbedienung Ersatzfernbedienung

	Back		Back
	Eco		Shift + 3D
	Menu		Menu
	i		Info
	Audio		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Red		Red
	Green		Green





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Yellow		Yellow				
	Blue		Blue				
	Fun-Link		Media				
	[...]		Subt				
	[≡♦]		D. Menu				
	[≡o]		Smart				
	[≡+]		Options				
	[≡]		Text				
	[≡?]		TV/R				
	[≡i]		List				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	>>		>>				
	<<		<<				
	>>		>>				
	<<		<<				

