


































Originalfernbedienung Ersatzfernbedienung

Standby		Power
Home		Shift + Menu /
Mute		Mute / Dimmer
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
<<		<< / Tune-
>>		>> / Tune+
I<		I<< / Preset-
>I		>>I / Preset+
Play		Play / Slow
Pauyse		Pause / Step / Freeze
Stop		Stop / Hold
Rec		Rec / Rec Mode
SUB		Subtitle / EQ
TTX		Text / Goto

Originalfernbedienung Ersatzfernbedienung

EPG		Guide / EPG / -/--
INFO		Info / Angle
Home		Smart / List
Mouse		Display / Media
Exit		Exit / Cancel / Clear
Menu		Menu / Home
Up		Up
Left		Left
OK		OK
Right		Right
Down		Down
Vol+		Vol+
Vol-		Vol-
TV/Radio		TV/Radio /
Audio		Audio / Lang I/II
Page+		CH+ / Page+
Page-		CH- / Page-



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
1			
2			
3			
4			
5			
6			
7			
8			
9			
0			
.	+ Shift + Guide / EPG / -/-		
Del	Back / Return		

