




 










 

 













Originalfernbedienung Ersatzfernbedienung

|   |        |   |       |
|---|--------|---|-------|
|    | Power  |    | Power |
|    | Mute   |    | Mute  |
|    | 1      |    | 1     |
|    | 2      |    | 2     |
|    | 3      |    | 3     |
|    | 4      |    | 4     |
|    | 5      |    | 5     |
|    | 6      |    | 6     |
|    | 7      |    | 7     |
|    | 8      |    | 8     |
|   | 9      |   | 9     |
|  | 0      |  | 0     |
|  | -/--   |  | Guide |
|  | Recall |  | Back  |
|  | Sleep  |  | Sleep |
|  | Audio  |  | Dual  |
|  | Aspect |  | 3D    |

Originalfernbedienung Ersatzfernbedienung

|   |        |   |                |
|---|--------|---|----------------|
|    | Input  |    | AV             |
|    | Info   |    | Info           |
|    | Up     |    | Up             |
|    | Left   |    | Left           |
|    | OK     |    | Ok             |
|    | Right  |    | Right          |
|    | Down   |    | Down           |
|    | Menu   |    | Menu           |
|    | Exit   |    | Exit           |
|    | Vol+   |    | Vol +          |
|   | Vol-   |   | Vol -          |
|  | FAV    |  | Pre Ch         |
|  | P.Mode |  | Shift + Format |
|  | S.Mode |  | Shift + Dual   |
|  | CH+    |  | Ch +           |
|  | CH-    |  | Ch -           |
|  | Red    |  | Red            |








 




Originalfernbedienung Ersatzfernbedienung

|   |                  |   |               |
|---|------------------|---|---------------|
|    | Green            |    | Green         |
|    | Yellow           |    | Yellow        |
|    | Blue             |    | Blue          |
|    | Home             |    | Smart         |
|    | Setup            |    | Options       |
|    | Mouse            |    | D. Menu       |
|    | EPG              |    | Shift + Guide |
|    | Text             |    | Text          |
|    | Stop/Reveal      |    | Stop          |
|   | Play/Pause / Mix |   | Play          |
|  | Play/Pause / Mix |  | Pause         |
|  | Index            |  | List          |
|  | <</Hold          |  | <<            |
|  | >>/Subpage       |  | >>            |
|  | I<< / Size       |  | I<<           |
|  | I<< / Size       |  | Format        |
|  | >>I/Cancel       |  | >>I           |

Originalfernbedienung Ersatzfernbedienung

|   |          |   |       |
|---|----------|---|-------|
|  | Tv/Radio |  | TV/R  |
|  | Rec      |  | Rec   |
|  | T-Shift  |  | Media |
|  | Sub-T    |  | Subt  |

