

 
 

 





 
 




 
 
 


 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|-----------------|-------------------------------------------------------------------------------------|-------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 / □ |  | 0 |
|  | Exit / TV/Radio |  | Exit |
|  | Exit / TV/Radio |  | TV/R |
|  | Mute |  | Mute |
|  | Vol- |  | Vol - |
|  | Vol+ |  | Vol + |
|  | i |  | Info |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|-----------------|---------------------------------------------------------------------------------------|--------------|
|  | Back |  | Back |
|  | Text |  | Text |
|  | Menu |  | Menu |
|  | Guide |  | Guide |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | ↑ |  | Shift + Ch + |
|  | ↓ |  | Shift + Ch - |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Red |  | Red |
|  | Green / Option |  | Green |
|  | Green / Option |  | Options |
|  | Yellow / Freeze |  | Yellow |





A black Mandis TV remote control with a variety of buttons. At the top are a red power button, a black mute button, and an orange shift button. Below these are four blue buttons: TV, DVD, SAT, and AUX. The next row includes a play mode button with a right arrow, a pause button with two vertical bars, a stop button with a square, and a red record mode button with a dot. The following row has four black navigation buttons: left double arrow, left single arrow, right single arrow, and right double arrow. Below these are four black buttons: disc nav, sound, ad, and settings. The next row contains four black buttons: list, dual, sub, and opt. The following row has four black buttons: prog, search, picture, and eco. The next row includes four black buttons: sleep, tv/r, format, and 3d. The following row has four black buttons: e-manual, repeat, zoom, and timer. The next row contains four black buttons: d-menu, text, a channel up/down arrow, and av. Below these are two black buttons: top menu and menu, and two black buttons: info and display. The center features a large blue directional pad with an OK button in the middle. To the left of the pad are two black buttons: clear and exit. To the right are two black buttons: return and back. Below the pad are four black buttons: home, smart, app, and media. The next row has four black buttons: volume up (+), volume down (-), channel up (+), and channel down (-). The following row contains four black buttons: 1, 2, 3, 4, 5, 6, 7, 8, 9, 0, and two black buttons: guide and pre-ch. The bottom row has four colored buttons: red (A), green (B), yellow (C), and blue (D). At the very bottom is the Mandis shop logo and the website address www.mandis.tv.