















 







 






 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Left		Left
	Right		Right
	Down / P-		Down
	Down / P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	--		Guide / EPG / -/--
	0		0
	P < P		Fav / Marker / PC
	PP		Back / Return
	Vol+		Vol+
	I-II		Audio / Lang I/II
	Mute		Mute / Dimmer
	Vol-		Vol-
	Info		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[TV]		Shift + 1
	[TV]		TV/Radio /
	[AV]		AV / Input / RDS
	[≡]		Text / Goto





Originalfernbedienung Ersatzfernbedienung

 
	[≡⊕]		Subtitle / EQ
	[/ ≡]		Picture / Format
	[≡X]		Exit / Cancel / Clear
	[≡↕]		Zoom / Size
	[≡?]		Display / Media
	[≡i]		Smart / List

Originalfernbedienung Ersatzfernbedienung







 

 
 




 























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Left		Left
	Select		OK
	Right		Right
	Down / P-		CH- / Page-
	Down / P-		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	+10		Guide / EPG / -/-
	0		0
	Repeat		Green / APP / Repeat
	Search		Red / Netflix / Search
	A→B		Yellow / YouTube / Repeat
	Display		Display / Media
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Prog		TV/Radio /
	C		Blue / Prime Video / Random
	Angle		Info / Angle
	Return		Back / Return
	Time		Sleep / Timer
	<<		<< / Tune-
	>>		>> / Tune+





Originalfernbedienung Ersatzfernbedienung


















	⏮		⏮	PRESET- ⏮	<< / Preset-
	⏭		⏭	PRESET+ ⏭	>> / Preset+
	▶/⏸		▶/⏸	SLOW ▶	Play / Slow
	▶/⏸		⏸	STEP-FREEZE ⏸	Pause / Step / Freeze
	■		■	HOLD ■	Stop / Hold
	Title		⏮	TITLE SOUND	Sound / Title
	Open / Close		⏮	SURROUND ▶	Eject / Surround

Originalfernbedienung Ersatzfernbedienung






















Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Tone+		>> / Tune+
Lang		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK

Originalfernbedienung Ersatzfernbedienung

Menu Right		Right
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9





Originalfernbedienung Ersatzfernbedienung

Guide -/-- 1.	GUIDE EPG	Guide / EPG / -/--
0/10	HDMI - SAT 0	0
2.Fav P/C 2.	PC FAV MARKER	Fav / Marker / PC
Red	NETFLIX SEARCH	Red / Netflix / Search
Green	APP REPEAT	Green / APP / Repeat
Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Prime Video RANDOM	Blue / Prime Video / Random
Lang	SHIFT + LANG I/II	Shift + Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

