

 





 

 



 



 



 



 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
			Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	P.Mode		Picture / Format
	Mute		Mute / Dimmer
	Aspect		Shift + Picture / Format
	S.Mode		Sound / Title
	TXT		Text / Goto
	Nicam		Audio / Lang I/II
	Display		Display / Media
	Up / PR +		CH+ / Page+
	Up / PR +		Up
	Sleep		Sleep / Timer
	Left / Vol -		Vol-
	Left / Vol -		Left
	Enter		OK
	Right / Vol +		Right
	Right / Vol +		Vol+
	Function		Smart / List



