 





 

 



 



 



 

 

 




 









 
 
 
 











 











 





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	16:9		Picture / Format
	0/FAV		Fav / Marker / PC
	0/FAV		0
	[O]/Repeat		Shift + Green / APP /
	Vol+		Vol+
	Input		AV / Input / RDS













Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	Vol-		Vol-
	EPG/?/A-B		Shift + Yellow / YouTube /
	EPG/?/A-B		Guide / EPG / -/--
	P-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Q/Double		Shift + Red / Netflix /
	M		Menu / Home
	←		Back / Return
	i		Info / Angle
	Red		Red / Netflix / Search
	Play/Pause		Play / Slow
	Green		Green / APP / Repeat





Originalfernbedienung **Ersatzfernbedienung**

	<<		<< / Tune-
	Yellow		Yellow / YouTube / Repeat
	Stop		Stop / Hold
	Blue		Blue / Prime Video / Random
	>>		>> / Tune+
	I<<		I<< / Preset-
	TXT		Text / Goto
	>>I		>>I / Preset+
	[...]		Subtitle / EQ
	Audio		Audio / Lang I/II

Originalfernbedienung **Ersatzfernbedienung**

