




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | DVD/TV |  | Shift + 2 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | [<>]/Zoom |  | Zoom / Size |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | -/--/Program |  | TV/Radio / |
|  | 0 |  | 0 |
|  | Mute |  | Mute / Dimmer |
|  | i/Goto |  | Info / Angle |
|  | Z/DVD Menu |  | Menu / Home |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|-----------------------------|
|  | P+ |  | Shift + CH+ / |
|  | P+ |  | CH+ / Page+ |
|  | - |  | Left |
|  | OK |  | OK |
|  | + |  | Right |
|  | TXT/DVD Setup |  | Text / Goto |
|  | P- |  | CH- / Page- |
|  | P- |  | Shift + CH- / |
|  | AV/Title |  | AV / Input / RDS |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | SUB/<< |  | << / Tune- |
|  | Update/>> |  | >> / Tune+ |
|  | Red/Stop |  | Red / Netflix / Search |
|  | Green/Play/Pause |  | Green / APP / Repeat |
|  | Yellow/Play/Pause |  | Yellow / YouTube / Repeat |
|  | Blue/>> |  | Blue / Prime Video / Random |

