
 
 
 
 
 


 
 
 

 
 
 







Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / AV	 0
 0 / AV	 AV
 i	 Info
 Mute	 Mute
 Up / P+	 Ch +
 Up / P+	 Up
 Down / P-	 Ch -

Originalfernbedienung	Ersatzfernbedienung
 Down / P-	 Down
 Right / Vol +	 Vol +
 Right / Vol +	 Right
 Left / Vol -	 Vol -
 Left / Vol -	 Left
 OK	 Ok
 Aux	 Media
 Txt	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Contrast -	 I<<
 Contrast +	 >>I
 Brightness -	 <<
 Brightness +	 >>





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Rec		Rec
	Stop		Stop
	Pause		Pause
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	>>		>>
	>>		>>I
	<<		<<
	<<		I<<
	Play		Play
	Play		Ok
	Aux		Media
	Text		Text

Originalfernbedienung Ersatzfernbedienung

