

 
 
 




 
 
 

 
 
 
 
 
 
 



 
 

 
 

 
 
 


 
 

 

 
 
 
 
 

 





 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	Eject/Open-Close		Eject
	VCR		Smart
	DVD		Media
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	AV/Input		AV
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	<<		<<
	Stop		Stop
	Play		Play
	Pause/Step		Pause
	Disc Menu/List		Menu
	Home		Shift + Smart
	Display		Info
	Return		Back
	Enter		Ok
	Up		Up
	PR/CH/TRK+		Ch +
	PR/CH/TRK-		Ch -
	Down		Down
	Right		Right
	Left		Left



