






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | FAV |  | Fav / Marker / PC |
|  | 0 |  | 0 |
|  | TXT |  | Text / Goto |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------|
|  | Exit |  | Exit / Cancel / Clear |
|  | ? |  | Info / Angle |
|  | @ |  | Picture / Format |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Back |  | Back / Return |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Tools |  | Setup / OPT / |
|  | Down |  | Down |
|  | Guide |  | Guide / EPG / -/- |
|  | Vol+ |  | Vol+ |
|  | Source |  | AV / Input / RDS |
|  | PR+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Mute |  | Mute / Dimmer |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|-------------------------|
| | PR- | | CH- / Page- |
| | I< | | I<< / Preset- |
| | >I | | >>I / Preset+ |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |
| | Rec | | Rec / Rec Mode |
| | Play | | Play / Slow |
| | Pause | | Pause / Step / Freeze |
| | Stop | | Stop / Hold |
| | 3D | | Zoom / Size |
| | [...]. | | Subtitle / EQ |
| | ..O | | D.Menu / Top |
| | Netflix | | Shift + Red / Netflix / |
| | My Media | | Display / Media |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

